

MS3803F-64H2 Users Guide

Susei Electronics System Co.,Ltd

2nd Edition Issued June 2011

1. General Description

MS3803F-64H2 is a writing target board for standard serial I/O mode used by connecting to EFP-I/IM or EFP-S2/S2V.

Reading and writing data to microcomputer 3803 groups with built-in Renesas Electronics 8 bit Flash memory, is enabled by using MS3803F-64H2.

<Packing contents>

- 1) MS3803F-64H2
- 2) Users guide (this manual)

External Figure of MS3803F-64H2 is shown in Fig 1.1.

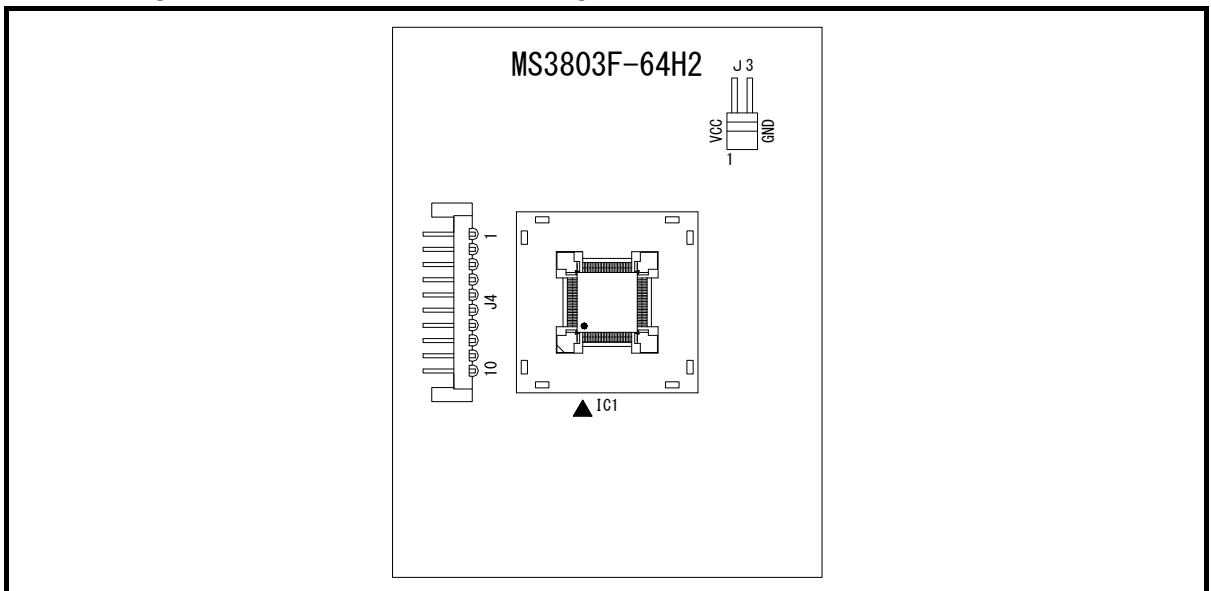


Fig 1.1 MS3803F-64H2 External Figure

2. Device constitution and a connection process

2. 1 Device constitution

Device constitution when you use MS3803F-64F2 is shown in Fig.2.1.

Fig2.1 Device constitution

Main body	Unit	Cable
EFP-I/IM	EF1SRP-01U	-
EFP-S2/S2V	EF1SRP-05U + EF1CNT-96P *1	-
	EF1SRP-01US2	EF1TGCB-B(4-wire target connection cable) (separate sale)

*1) when you use EF1SRP-05U in EFP-S2/S2V, EF1CNT-96P (separate sale) is necessary.

2. 2 Connection Process

In case MS3803F-64H2 is used, please connect it to 4-wire target connection cable J4, power supply cable J3 as shown in Fig 2.1.

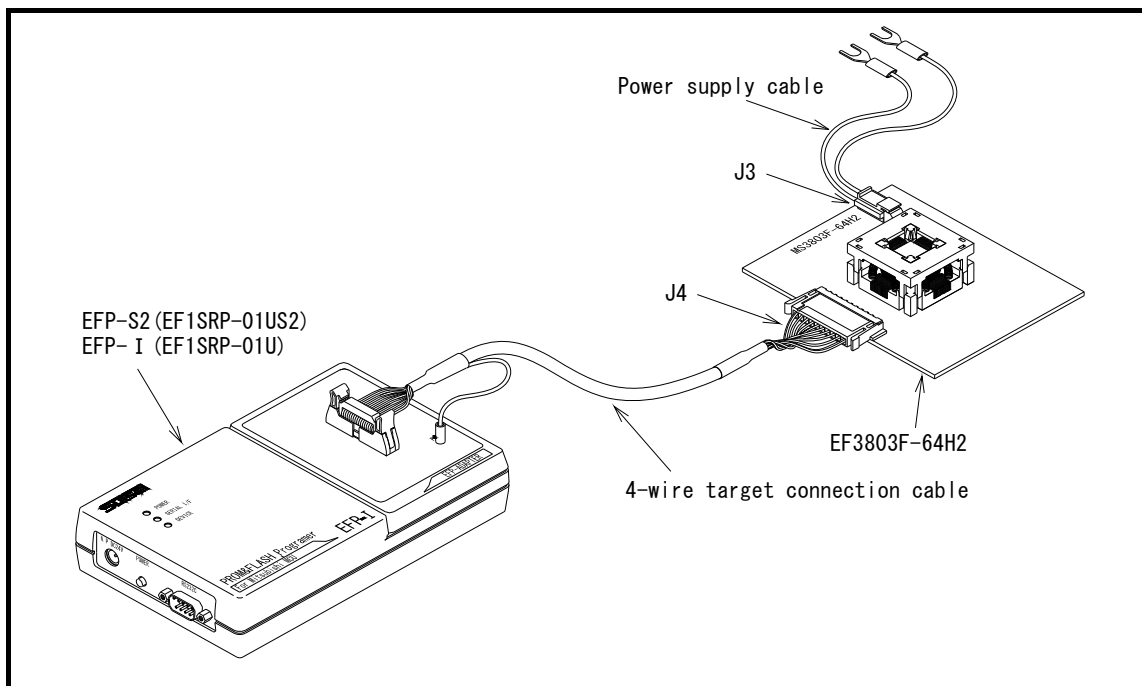


Fig 2.1 Connection with MS3803F-64H2

3. List of Corresponding MCU and corresponding version

3. 1 List of Corresponding MCU

A corresponding MCU list of MS3803F-64H2 is shown in **Fig 3.1**.

Fig 3.1 Corresponding MCU List for MS3803F-64H2

MCU type	Corresponding MCU name	Program memory area
M380xxFFH	M38039FFHKP	1000h~FFFFh

3. 2 About Software version (S/W)

The version numbers such as EFP-1 and WinEFP are displayed by [Help]→[About] in the WinEFP window menu. Please download the latest version up data on the following site when the S/W version such as EFP- I used is old.

< EFP- I S/W the latest free download site >

http://www.suisei.co.jp/download_e/productdata_efp1_e.html

< EFP-S2 S/W the latest free download site >

http://www.suisei.co.jp/download_e/productdata_s2_e.html

< EFP-S2V S/W the latest free download site >

http://www.suisei.co.jp/download_e/productdata_s2_e.html

Note on Corresponding Versions

Above corresponding versions might change without notice on account of the future capability improvement, etc. Furthermore in case the upgrade procedure manual is attached when this product is purchased, please refer to that manual as a priority.

4. Insertion Direction of MCU and cleaning of IC socket

4. 1 Insertion Direction of MCU

When MCU is inserted, No.1 pin of the IC socket on MS3803F-64H2 and MCU's No.1 pin should be connected. The wrong insertion would cause a serious breakage of MCU.

Insertion direction of MCU is shown in Fig 4.1.

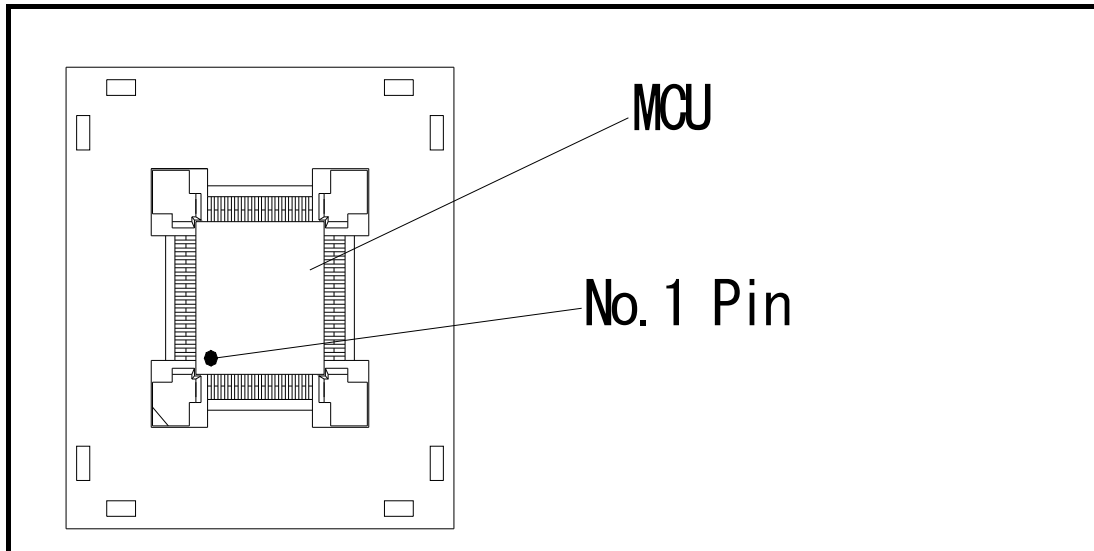


Fig 4.1 Insertion Direction of MCU

4. 2 Cleaning of IC Socket

A contact pin inside of the IC socket of the MCU unit might deteriorate and a contact failure might occur because of the number of times used and its age of service. As the contact failure may cause incorrect writing of MCU and malfunction of the writer, please take the below measures.

Measures against IC Socket Contact Failure

- (i) Please clean the contact pin surface inside of IC socket with a brush, etc. regularly, depending on the number of times used.
- (ii) If the product is not to be used for a long period, please keep it with less humidity in a plastic bag, etc.

Though enquiries on contact failures can be made, we regard IC sockets as consumable supplies. We may recommend you to replace them if a contact failure of IC socket occurs due to its use deterioration.

【Recommended item for cleaning】

About the cleaning of the contact pin in the IC socket, we recommend the use of the nanotech brush (Kita Mfg Co., Ltd).

The nanotech brush can remove the dirt which stuck to a contact pin, a very small amount of metastasis of solder. When a contact poor problem occurred, please try it.

About nanotech brush, please ask us or Kita Mfg Co., Ltd (refer to the following site).

Nanotech brush (Kita Mfg Co., Ltd.) http://www.kita-mfg.com/pro_nanotech_e.html

5. List of Pin Connection

Connector terminal names of target cable connection connector of MS3803F-64H2 are shown in List 5.1., 5.2.

List 5.1 List of J3 Connector Connection Terminal

Pin No.	Terminal Name	PIN No.	Terminal Name
1	V C C	2	G N D

List 5.2 List of J4 Connector Connection Terminal

Pin No.	Terminal Name	PIN No.	Terminal Name
1	G N D	6	S C L K
2	R X D	7	T X D
3	B U S Y	8	P G M / O E
4	V P P	9	R E S E T
5	V D D	1 0	G N D